 
 




Supplied with:
AC Mains Charger

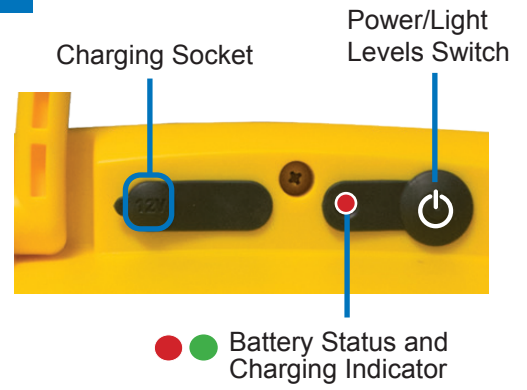

Power/light levels switch:

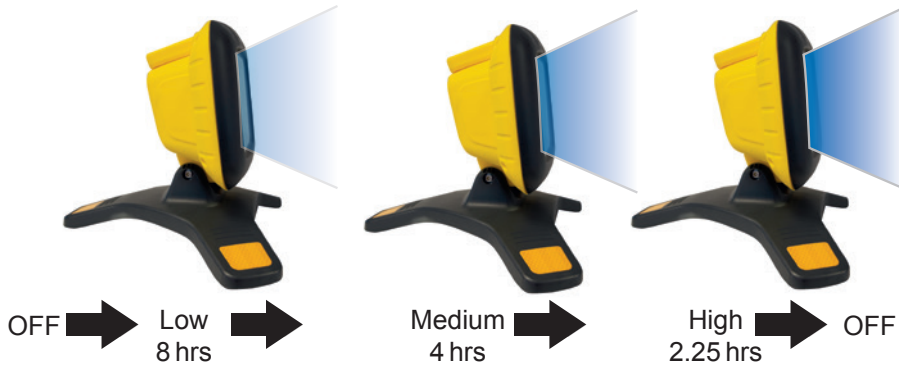

 
To dim the light, switch the light level to High and hold the power switch for 3 seconds and release at the desired light level. (Lowest level operates for 60 hrs).

Battery status indicator:

- Flashing amber (steady flash) when battery level is low.
- Flashing red when the unit needs charging.

The Galaxy Pro can also run from its AC Charger on Low light level (indoor use only).

Charging Options:

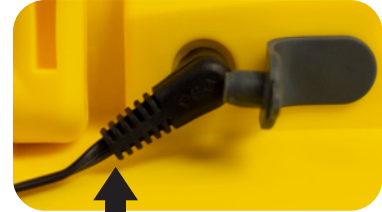

AC Mains
Charger
(Supplied)

Vehicle
Charger
(Optional
Accessory)

Battery charging indicator:

- Red light while charging
- Green light when charged

Recharge is approximately 8 hours.



Handy storage
compartment
for chargers.



The floodlight
and handle will fold
flat for compact storage

Hi-Vis reflective feet



Product weight (g)	1.52kg
Product size (mm)	310x350x285mm

Optional Accessories:

2m Stainless Steel Tripod:
Extends from 0.8 to 2 metres



Two Magnetic Mount Choices:



Large centre magnet for narrow beam mounting



OR

Set of 3 magnets for wider area, best stability mounting

Vehicle Charger:

